DURABRAND

QUICK SETUP GUIDE
for AD980BD

Congratulations on your purchase of a DURABRAND DVD/VCR. This Quick Setup Guide takes you through the first-time setup with simple instructions so you can enjoy exceptional audio and video quality as soon as possible. Please refer to the Owner's manual for detailed instructions. If you have read your instructions and still need assistance, call ASDA helpline at **0870 3833010**. Unless stated, all procedures described use the remote control.

Loading Batteries in the Remote Control

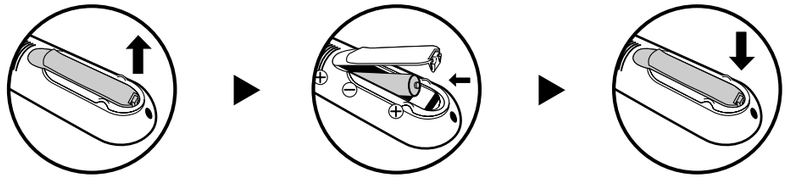

1) Open the battery cover.

2) Insert two R6 (AA) batteries, with the (+) and (-) ends in the correct positions.

3) Close the cover.

Connecting to a TV

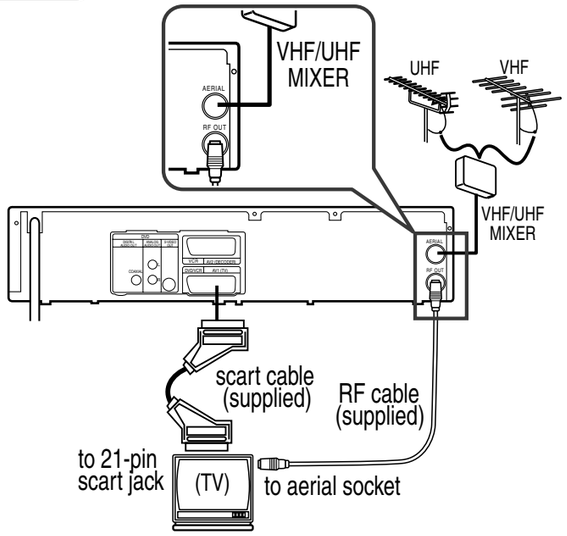

WARNING!
Never make or change connections with the power switched on.

1) Disconnect the antenna or cable from the TV and connect it to the AERIAL jack of the unit.

2) Connect the RF OUT jack of the unit to the antenna in jack of the TV using the supplied RF cable.

3) Connect the AV1 (TV) scart jack of the unit to the scart input jack of the TV using the supplied scart cable.

4) Plug in the TV and the unit.

Note:

- Playback picture from DVD and VCR cannot be delivered through the RF cable. The RF cable is only for sending the antenna signal to the TV.

1VMN23180
E8D81BD *****

Clock Setting

● Setting the Clock

This unit incorporates a 24-hour clock.
The clock must be set for the Timer Recording function to operate correctly.

1) Press VCR, then MENU.
2) Press ▲ or ▼ to select “INITIAL”, then press ►.
3) Press ▲ or ▼ to select “CLOCK”, then press ►.
4) Use ▲, ▼ or ► to select current year, month, date, hour and minutes.
5) Press MENU to start the clock.

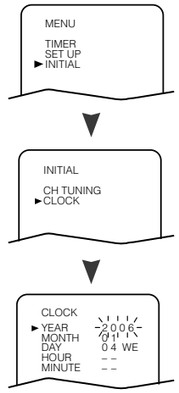

Note:

- Press ◄ to go back to the item you want to correct during step **4)**.
- Although seconds are not displayed, they begin counting from 00 when you exit by pressing MENU.
  Use this feature to synchronize the clock with the correct time.
- If the unit is unplugged or if there is a power failure for more than 30 seconds, you may have to reset the clock.

Channel Presetting

● Channel Presetting

Tuning of broadcast channels not already preset in the unit can be performed in two ways.

● Automatic Channel Preset

1) Turn on the TV and select the channel set as the video channel on the TV.
2) Press VCR, then MENU.
3) Press ▲ or ▼ to select “INITIAL”, then press ►.
4) Press ▲ or ▼ to select “CH TUNING”, then press ►.
5) Press ▲ or ▼ to select “AUTO”, then press ►.

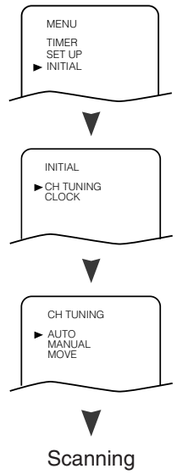

● Manual Channel Preset

Manual channel preset enables you to manually tune in a channel.

1) Press VCR, then MENU.
2) Press ▲ or ▼ to select “INITIAL”, then press ►.
3) Press ▲ or ▼ to select “CH TUNING”, then press ►.
4) Press ▲ or ▼ to select “MANUAL”, then press ►.
5) Press ▲ or ▼ to select “POSITION”, then press ►.
When a weak signal is received in Manual Tuning mode, you can change the background to solid blue or the static screen by pressing CLEAR/C.RESET.
6) Press **the Number buttons**, ▲ or ▼ to select a position number from 01-99, then press ►.
7) Press ▲ or ▼ to select “CHANNEL”, then press ►.
8) Press ▲ or ▼ to start scanning.
The unit's tuner will begin to search up or down automatically. When a channel is found, the unit will stop searching and the picture will appear on the TV Screen.
You can select desired channel number by using **the Number buttons**.
You must refer to the Channel Plan table and press three digits to select the channel number.
(To select channel 24, press 0 button first and then press 2 and 4.)
9) Press MENU to exit.

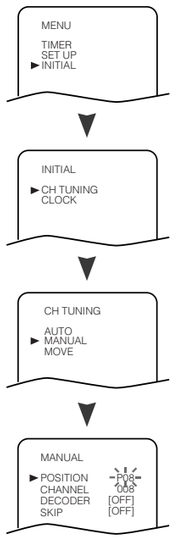

Channel Plan	
CH Indication	**TV Channel**
01 – 10	IRA – IRJ, GAP
21 – 69	E21 – E69
74 – 78	X, Y, Z, Z+1, Z+2
80 – 99, 100	S1 – S20, GAP
121 – 141	S21 – S41

● To Select a Channel

You can select a channel using CH. (⏭/▲ / ⏮/▼)
or directly pressing **the Number buttons** on the remote control.

Loading and Playing a DVD

1) Turn on the TV, amplifier and any other components connected to the unit.
2) Set the TV and audio receiver (commercially available) to the correct channel.
3) Press STANDBY-ON and confirm that the DVD OUTPUT indicator is lit.
If not, press DVD to switch to DVD mode.
4) Press OPEN/CLOSE/EJECT to open the disc loading tray and place the disc on the tray, with the label side up.
5) Press PLAY.
The tray will close automatically and playback will start.
• For DVDs with a title menu recorded, the screen will display the title.
6) Press STOP to stop playback.

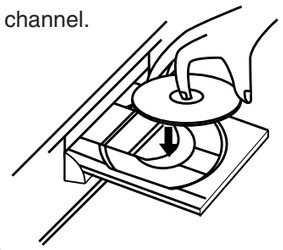

Note:
• A “prohibited icon” may appear at the top-right on the TV screen during operation, warning that a prohibited operation has been encountered by this unit or the disc.

Important

For expert advice, please phone the ASDA helpline on

0845 300 7775